



Cut here to remove. Do Not Tear!

COPPER SPUR HV UL & HV UL mtnGLO® SET UP INSTRUCTIONS

1. Remove contents from stuff sack. Spread tent body out over your desired camp site.
2. Stake out the four corners of the tent body.
3. UL 2, 3, 4 & 5 assemble the two poles: One main pole with a 4-way hub and one short straight crossover pole. UL1 assemble one main pole with two hubs and an attached crossover pole. To ensure each pole section is fully seated insert each pole section into the next by hand, instead of allowing the shock cord to snap them together.
4. Position the assembled main pole on top of the tent body. Match the colors of the pole ends with the matching colors of the webbing on the tent body.
5. Insert the pole tips into the keyed hole on the TipLok Buckle™ at the four corners of the tent.
6. Attach the plastic clips on the tent body to the main pole.
7. UL2, 3, 4 & 5 place the crossover pole across the top of the main pole. The crossover pole on UL1 is already attached to the main pole.
8. Clip the ends of the crossover pole into the clear plastic Ball Cap clips that are located above the doors of the tent body. UL 2, 3, 4 & 5 attach the center plastic clip on the tent body to the crossover pole.
9. Drape the rainfly over the tent body and match the colors of the webbing on the fly with the webbing on the body.
10. Insert the tips of the crossover pole into the small pockets located on the underside of the fly.
11. Attach all Velcro® tabs on the underside of the fly to the corresponding pole sections for best stability.
12. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the rainfly to those on the tent body.
13. Tighten the webbing on each buckle as needed to keep the rainfly taut.
14. Stake out the vestibules then stake out all remaining guylines.
15. Low Vent Set Up: For increased ventilation, hook the cord located at the bottom of the vestibule door to the toggle at the top of the zipper located on the underside of the fly
16. Awning Set Up: Unzip the two zippers at the head-end of the tent, attach extra guylines (included in stake bag) to corner cord loops, adjust trekking poles to desired height, insert trekking pole tips through grosgrain loop or cord loop on corners of panel. Stake out guylines.

Separate 6" length pole segment included for emergency field repair. Slide repair pole over the break to act as a splint. Secure splint in place with tape.


FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for your tent, it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes.



1. Lay the footprint on the ground and stake out.
2. UL 2, 3, 4 & 5 assemble the two poles: One main pole with a 4-way hub and one short straight crossover pole. UL1 assemble one main pole with two hubs the crossover pole is attached to the main pole. To ensure each pole section is fully seated insert each pole section into the next by hand, instead of allowing the shock cord to snap them together.
3. Position the assembled main pole on top of the footprint. Match the colors of the pole ends with the matching colors of the webbing on the footprint.
4. Insert the pole tips into the grommets at the four corners of the footprint.
5. UL2, 3, 4 & 5 insert the tips of the crossover pole into the small pockets located on the underside of the fly.
6. UL2, 3, 4 & 5 with the crossover pole now attached to the fly drape the rainfly over the pole frame. UL1 drape the rainfly over the pole frame, then insert the tips of the crossover pole into the small pockets located on the underside of the fly.
7. Match the webbing colors on the fly with the matching colors of the webbing on the footprint.
8. Attach all Velcro® tabs on the underside of the fly to the corresponding pole sections for best stability.
9. Make sure the webbing at the corners of the rainfly is completely slackened. Attach the buckles on the fly to those on the footprint.
10. Tighten the webbing on each buckle as needed to keep the rainfly taut.
11. Stake out the vestibules then stake out all remaining guylines.
12. Low Vent Set Up: For increased ventilation, hook the cord located at the bottom of the vestibule door to the toggle at the top of the zipper located on the underside of the fly
13. Awning Set Up: Unzip the two zippers at the head-end of the tent, attach extra guylines (included in stake bag) to corner cord loops, adjust trekking poles to desired height, insert trekking pole tips through grosgrain loop or cord loop on corners of panel. Stake out guylines.




Copper Spur HV UL1 Tent Body and Fly

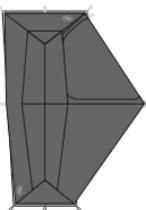

Copper Spur HV UL2 and HV UL3 Tent Body and Fly

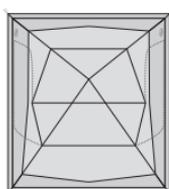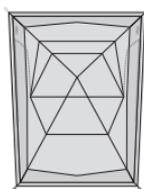

Copper Spur HV UL4 and HV UL5 Tent Body and Fly

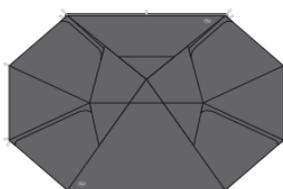

TipLok Tent Buckle™

DAC Hardware:



Ball Cap

COPPER SPUR HV UL mtnGLO® SET UP INSTRUCTIONS




The mtnGLO® Tent Light Technology by Big Agnes lets you light up the backcountry

How to use it:

1. Take the mtnGLO® logo controller out of the pocket. Insert 3 AAA batteries in the controller (batteries not included).
2. Put the controller back in the pocket and connect to the tent light USB.
3. Push the button on the controller; one click is for full power, second click will adjust the light to 50% power and the third click will turn it off.
4. Always disconnect the controller before packing your tent to save battery life.



Copper Spur HV UL1

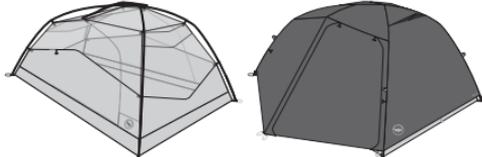

Copper Spur HV UL2 and HV UL3



Copper Spur HV UL4 and HV UL5

Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

tech@bigagnes.com

HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- We recommend staking out all corners, vestibules and guylines to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Fold and roll your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in hot temperatures (such as a car trunk or attic space), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent. We recommend McNett Zip Care.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired, at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair must be clean and free of debris.



For more information on Tent Care or our Warranty and Return policy, see www.bigagnes.com

P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • www.bigagnes.com



Cut here to remove. Do Not Tear!