


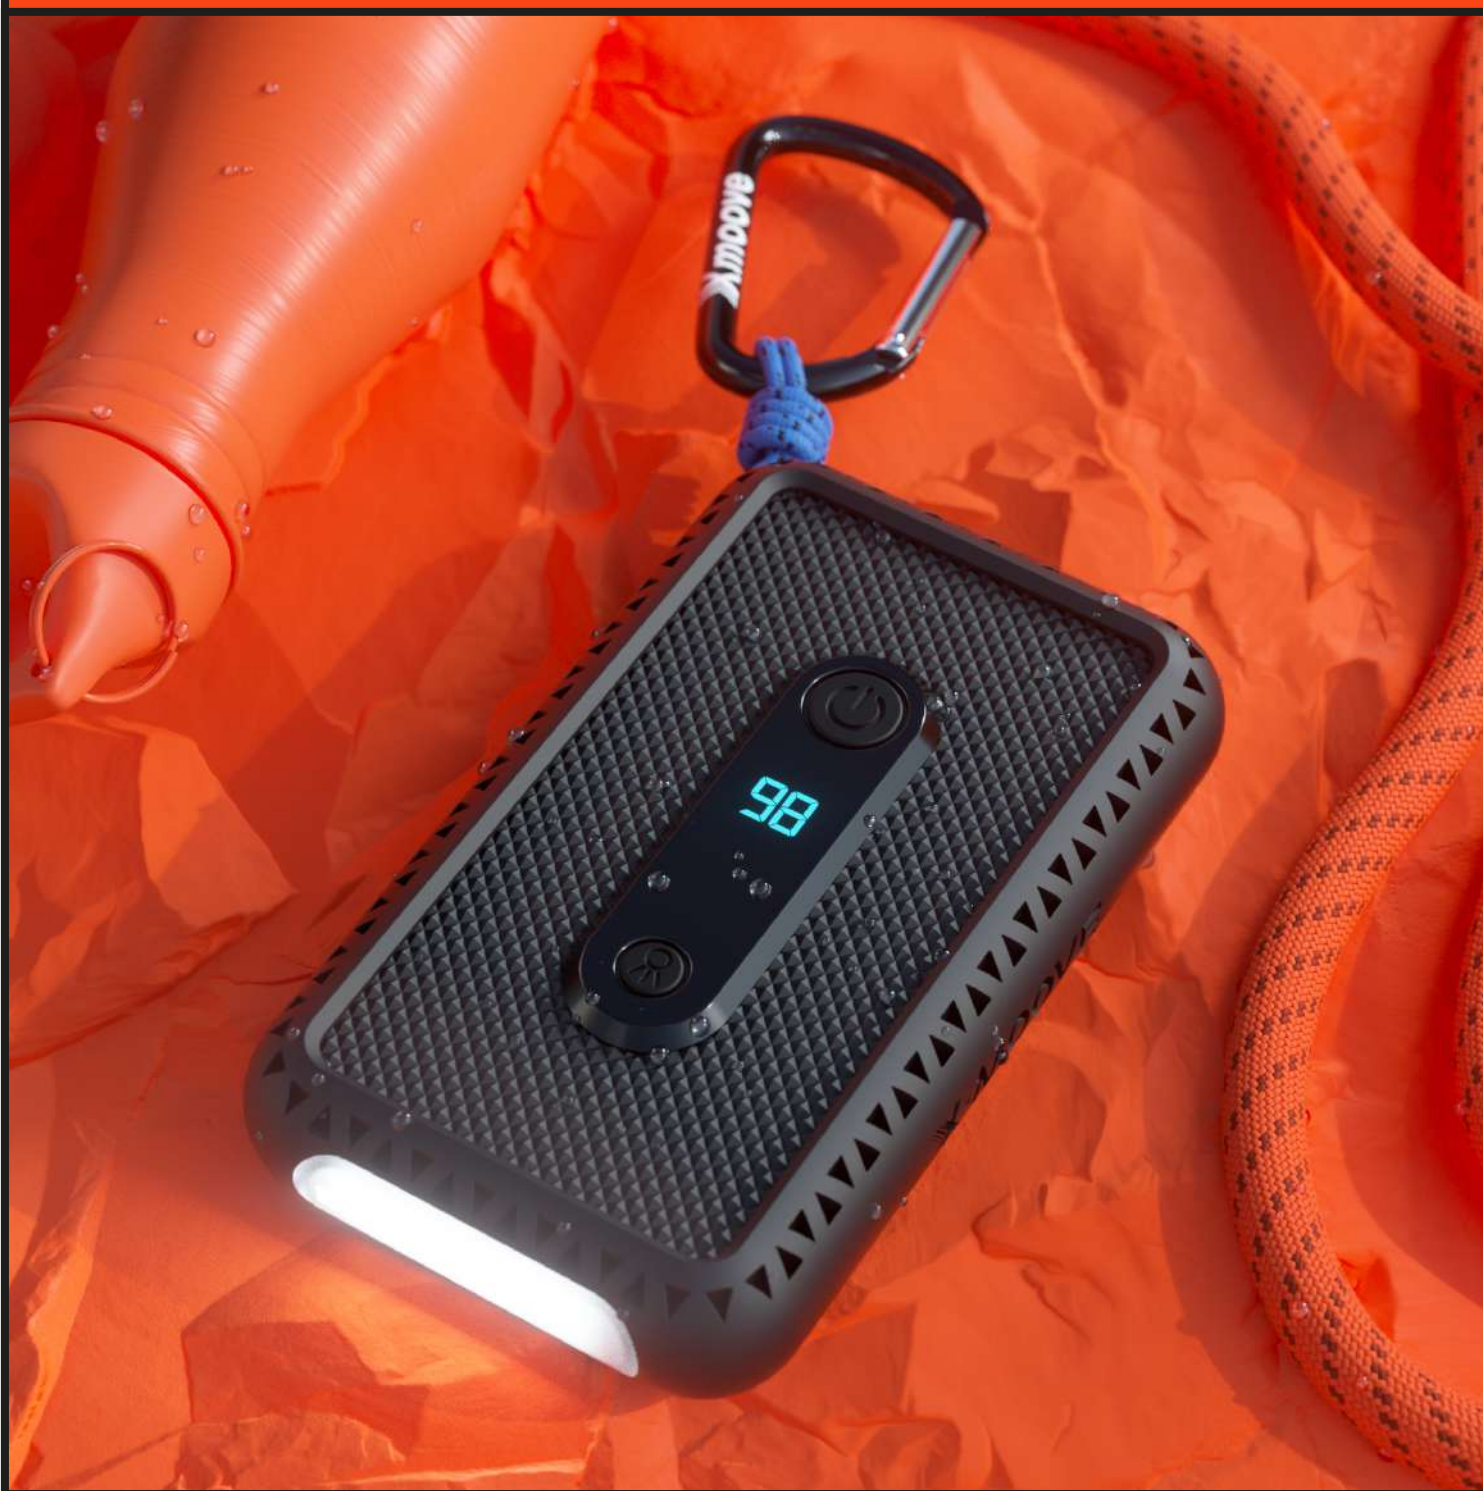

Batterie Externe Antichoc

Shock-proof Power Bank

Manuel utilisateur • User guide



FRANÇAIS

1. Précautions

Merci de lire le manuel d'utilisation avant usage afin de tirer pleinement partie de votre batterie Rugged.

- Ne pas percer, plier ou jeter le produit.
- Ne pas jeter le produit au feu.
- Ne pas exposer la batterie à une chaleur excessive.
- Ne pas court-circuiter la batterie avec du plomb ou d'autres produits en métal.
- Ne pas transporter ou entreposer la batterie avec des objets en métal.
- Éviter l'électricité statique, les forts champs magnétiques et les radiations.
- Ne pas désassembler la batterie ou changer sa structure.
- Arrêter d'utiliser la batterie en cas d'odeur inhabituelle ou de distorsions du produit, ou autres anomalies.
- Garder hors de portée des enfants.
- Charger et utiliser la batterie dans un endroit sec.

2. Caractéristiques produit

- Capacité de 10 000mAh
- Port USB-C^{in/out} - Power delivery 18W
- Ports USB - 2 x 2.1A
- IP66 - Résistante aux chocs, aux fortes projections d'eau et à la poussière
- Lampe torche puissante
- Afficheur de charge digital
- Mousqueton intégré
- Dimensions : 14 x 7.5 x 2.7cm
- Poids : 270g

3. Comment recharger un appareil avec la batterie Rugged

Avec le port USB :

Branchez un câble adapté à votre appareil sur un des ports USB de la Rugged, la charge doit se déclencher automatiquement, sinon, presser le bouton Power pour la déclencher manuellement.

Avec le port USB-C :

Pour recharger une Nintendo® Switch® ou un Macbook® USB-C, branchez un câble USB-C vers USB-C sur le port USB-C de la Mini 10. Ces appareils étant très énergivores, pour optimiser leur recharge, il est conseillé de ne pas les utiliser pendant la charge.

Nous vous conseillons de le charger votre Smartphone à l'aide d'un câble USB-C pour le charger plus rapidement.

4. Comment recharger votre batterie Rugged

Pour recharger la Rugged, branchez la simplement à un chargeur secteur grâce au câble USB-C inclus. L'indicateur LED de niveau de charge se met à clignoter.

Pour une recharge rapide, il est conseillé de la recharger à l'aide d'un chargeur secteur USB-C Power Delivery.

5. Vue globale



@ contact@xmoove.fr

📷 [x_moove](#)

📘 [X-Moove](#)

👉 www.xmoove.fr

ENGLISH

1. Precautions

Please read the user guide before use to get the most out of your Rugged power bank.

- Do not pierce, bend or trash the product.
- Do not throw the product into fire.
- Do not expose the power bank to excessive heat.
- Do not short-circuit the power bank with lead or other metal products.
- Do not transport or store the power bank with metal objects.
- Avoid static electricity, strong magnetic fields and radiation.
- Do not disassemble the battery or change its structure.
- Stop using the power bank in case of unusual smell or distortion of the product, or other abnormalities.
- Keep out of reach of children.
- Charge and use the battery in a dry place

2. Product features

- **10 000mAh Capacity**
- **USB-C^{in/out} Port - Power delivery 18W**
- **USB Ports - 2 x 2.1A**
- **IP66 - Shock, water and dust resistant**
- **Powerful flashlight**
- **Digital charge display**
- **Integrated carabiner**
- **Dimensions: 14 x 7.5 x 2.7cm**
- **Weight : 270g**

3. How to charge a device with the Rugged power bank

With the USB port :

Connect a cable suitable for your device to the USB port of the Rugged, your device should start charging. If not, press the Power button to start charging.

With the USB-C port :

To charge a Nintendo® Switch® or USB-C Macbook®, plug a USB-C to USB-C cable to the Rugged's USB-C port. Since these devices are very energy intensive, to optimize their charging, it is advised not to use them while charging.

We advise you to charge your smartphone with a USB-C cable to charge it faster.

4. How to charge your Rugged power bank

To charge the Rugged, simply plug it into a mains charger with the included USB-C cable. The LED charge level indicator will start flashing. For fast charge, we recommend charging with a USB-C Power Delivery AC charger.

5. Global view



@ contact@xmoove.fr
📷 [x_moove](#)
📘 [X-Moove](#)
📍 www.xmoove.fr